



1. Open the insulation cover on the top.
2. Remove the temperature and humidity module that needs to be replaced.
3. Replace it with a new temperature and humidity module. Make sure that the module is securely fastened in place.
4. Install the protection filter for the temperature and humidity module, and close the insulation cover.