

Wireless Indoor Outdoor Thermometer With 3 Remote Temperature Sensors



Table of Contents

1. Introduction.....	4
2. Get Started.....	4
2.1 Parts List.....	5
2.2 Recommend Tools.....	5
2.3 Thermometer Sensor Set Up.....	5
2.4 Display Console Set Up.....	7
2.4.1 Display Console Layout.....	10
2.4.2 Sensor Operation Verification.....	11
3. Wireless Sensor Installation.....	11
3.1 Mounting with Zip Tie.....	11
3.2 Mounting with Nail or Screw.....	12
4. Console Operation.....	13
4.1 Setting for 12/24hr Switch, Time and °C/°F Switch.....	14

4.2 Setting for Alarm Clock.....	15
4.3 Setting for Min/Max Record.....	15
4.4 Setting for RF Channels.....	17
5.Sensor Resynchronization.....	18
6.Best Practices for Wireless Communication..	18
7.Specifications.....	19
7.1 Wireless Specifications.....	19
7.2 Measurement Specifications.....	20
7.3 Power Consumption.....	20
8. Warranty Information.....	21

1. Introduction

Thanks for your purchasing of the Wireless Indoor Outdoor Thermometer with 3 Remote Temperature Sensors. To ensure the best product performance, please read this manual and retain it for future reference.

2. Get Started

Note: Power up sequence must be performed in the order shown in this section (insert batteries in the Remote Sensor first, Display Console second).

Attention:

- Do not mix old and new batteries
- Do not mix Alkaline, Standard, Lithium or Rechargeable batteries
- Ensure batteries are installed correctly with

regard to polarity +/-

2.1 Parts List

One Display Console (Receiver)

Three remote sensors (Transmitter)

One User Manual

2.2 Recommend Tools

Hammer for hanging remote thermometer transmitter.

2.3 Thermometer Sensor Set Up

1. Remove the battery door on the back of one sensor by sliding the compartment door down, as shown in Figure 1.

2. Set RF sensor channel.

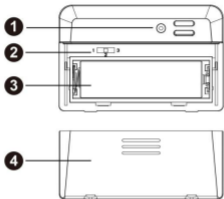


Figure 1

- 1 Wireless transmitter LED
- 2 1, 2, 3 RF Channels
- 3 AA Battery Compartment
- 4 Battery Compartment Cover

Note: This device supports up to 3 sensors, to set each channel number, change Dip Switches 1, 2, 3 as referenced in Figure 1.

3. Insert one AA battery.
4. After inserting the battery, the remote sensor LED indicator will light for 4 seconds, and then flash once per 60 seconds thereafter. Each time it flashes, the sensor is transmitting data.
5. Close the battery door.
6. Repeat for the additional remote sensor, verifying each remote is on a different channel.

2.4 Display Console Set Up

1. Move the remote thermometer(s) about 2 to 3m away from the display console (if the sensor is too close, it may not be received by the display console).
2. Remove the battery door on the back of the display, as shown in Figure 2. Insert one AA (alkaline, lithium or rechargeable)

battery in the back of the display console.

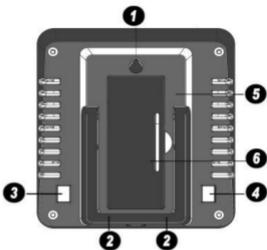


Figure 2

1. Integrated Hang Hole
2. Stand Mount
3. CH/+ Button
4. Mode Button
5. Battery Compartment
6. Battery Compartment Cover

All of the LCD segments will light up for a few seconds to verify all segments are operating properly.

3. Replace the battery door, and fold out the desk stand and place the console in the upright position.

The console will instantly display indoor temperature. The remote temperature will update on the display within a few minutes.

While in the search mode, the reception

search icon  flash.

If the remote does not update, please contact our Customer Service for support.

2.4.1 Display Console Layout



Figure 3

1. Alarm Clock Icon
2. Current Indoor Temperature
3. RF Channels
4. Time
5. Outdoor Reception Icon
6. Current Outdoor Temperature

2.4.2 Sensor Operation Verification

Verify the indoor and outdoor temperature match closely with the console and sensor array in the same location (about 2 to 3m apart). The sensors should be within 2°F (the accuracy is $\pm 1^\circ\text{F}$). Allow about 30 minutes for both sensors to stabilize.

3. Wireless Sensor Installation

It is recommended you mount the remote sensor in a shaded area. Direct sunlight and radiant heat sources will result in inaccurate temperature readings. Although the sensor is water resistant, it is best to mount in a well-protected area, such as under an eave.

3.1 Mounting with Zip Tie

Mounting the sensor with a zip tie will result in

better accuracy when mounting outside, since it is not touching another object. Other objects will store and radiate heat (or cold).



Figure 4

3.2 Mounting with Nail or Screw

To mount the sensor with a nail or screw, the cap must be less than or equal to 5.0 mm in diameter.

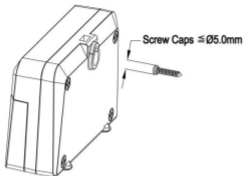


Figure 5

4. Console Operation

Note: The console has two buttons for easy operation: **【 CH/+ 】** button (on the left), and **【 MODE 】** button (on the right).

If no operation for 30s, display will return to normal mode.

4.1 Setting for 12/24hr Switch, Time and °C/°F Switch

Long press **【MODE】** button 2s, step into setting mode.

- a. Short press **【CH/+】** switch 24/12hr display
- b. Short press **【MODE】** ,step into Hour setting, Short press **【CH/+】** to adjust the number from 1-12 or 0-23.
- c. Short press **【MODE】** ,step into Minute setting, Short press **【CH/+】** to adjust the number from 0-59.
- d. Short press **【MODE】** , step into temperature unit setting, short press **【CH/+】** to select°C/°F display.
- e. Short press **【MODE】** , to complete setting mode and back to normal mode.

4.2 Setting for Alarm Clock

Short press **【MODE】** button, step into alarm clock display setting mode, short press **【CH/+】** to enable (speaker icon is lit) or disable alarm function.

a. Long press **【MODE】** button 3s, step into alarm Hour setting, Short press **【CH/+】** to adjust the number from 1-12 or 0-23.

b. Short press **【MODE】** , step into alarm Minute setting, Short press **【CH/+】** to adjust the number from 0-59.

Note: When the alarm clock is ringing, you can stop it by pressing any button.

4.3 Setting for Min/Max Record

4.3.1 Min value mode

a. Short press **【MODE】** for twice, step into Min

value display mode.

b. Short press **【CH/+】** to select other available outdoor sensor Min value (if no extra outdoor sensor available, it will display “--.” instead).

c. Long press **【CH/+】** 2s, reset the Min value of indoor temperature and the current displayed Min value of outdoor RF channel.

4.3.2 Max value mode

a. Short press **【MODE】** for three times step into Max value display mode.

b. Short press **【CH/+】** to select other available outdoor sensor channel Max value(if no extra outdoor sensor available, it will display “--.” instead).


Long press **【CH/+】** for 2s,reset the Max value of indoor temperature and the current displayed Max value of outdoor RF channel.


c. Long press **【CH/+】** 2s, reset the Max value of

indoor temperature and the current displayed
Max value of outdoor RF channel.

4.4 Setting for RF Channels

During normal display mode, press 【CH/+】 to select outdoor sensor display in the following sequence:


CH1 – CH2 – CH3 – 

Note: When the icon  appears, it means the station enters **cycle display mode** and it will display temperature readings of the three channels circularly.

To cancel cycle display mode, short press 【CH/+】 button once.

5. Sensor Resynchronization

when the remote sensor lost reception or extra sensors to be added, press both the **【CH/+】** and **【MODE】** buttons at the **same time** for **five seconds**.

While in the search mode, the reception search icon  flash.

6. Best Practices for Wireless Communication

Note: To insure proper communication, mount the remote sensor on a vertical surface, such as a wall. **Do not lay the sensor flat.**

Keep the console several feet away from computer monitors and TVs.

7.Specifications

7.1 Wireless Specifications

- Line of sight wireless transmission (in open air): 300feet(100meters)
- Frequency: 433 MHz
- Update Rate: 60 seconds

7.2 Measurement Specifications

The following table provides specifications for the measured parameters.

Measurement	Range	Accuracy	Resolution
Indoor Temperature	14 to 140 °F /-10 to 60°C	± 1 °F/°C	0.1 °F/°C
Outdoor Temperature	-40 to 140 °F /-40 to 60°C	± 1 °F/°C	0.1°F/°C

7.3 Power Consumption

- Base station (display console) : 1 x AA Alkaline or Lithium batteries (not included)
- Remote sensor : 1 x AA 1.5V Alkaline or Lithium batteries (not included) for each sensor

8. Warranty Information

We disclaim any responsibility for any technical error or printing error, or their consequences.

All trademarks and patents are recognized.

We provide a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased and only to the original purchaser of this product. To receive warranty service, the purchaser must contact us for problem determination and service procedures.

This warranty covers only actual defects within

the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.